

BT-101 |

BT101 SERIES

101TBBK | 101TBBR | 101TBGR | 101TBRD | 101TBWT

//FEATURES

- Battery must be charged for 5 hours before first use. Unit can be operated while charging.
- 33/45/78 RPM Multi-Speed Portable Turntable Player
- Briefcase Form Factor
- Rechargeable Battery
- Automatic Pause and Stop Feature
- Stereo FM Radio
- Encode to MP3
- SD/USB Playback
- Aux In
- RCA Audio Output
- 2 Built-in Stereo Speakers

//33/45/78RPM

PLAYING A RECORD

1. Select "PHONO" mode
2. Set appropriate speed (33, 45 or 78) depending on record
3. Set the auto stop control to ON if you want the turntable to stop turning when it has reached the end of the record.
4. Use lift lever to move stylus (it is recommended over doing it manually)

NOTE: We don't need to mention that a record is required and needs to be placed in the unit, right?

PC, TV, DVD

AUX

USB, SD/MMC

MP3

QUICK START GUIDE

A ENCODING

- 1 SELECT DESIRED MODE FOR ENCODING USING (INPUT/SOURCE SELECTOR).
- 2 INSERT YOUR MEMORY DEVICE (e.g. SD Card or USB drive - not both).
- 3 PRESS THE RECORD BUTTON AND WAIT UNTIL SD OR USB ICON FLASHES.
- 4 START YOUR DESIRED MEDIA (PHONO, AUXILIARY INPUT OR CASSETTE).
- 5 PRESS STOP BUTTON WHEN DONE. ENJOY!

B RADIO FM

- I **SELECT MODE:**
FM (Only FM is available)
- II SCAN and SET STATIONS:
HOLD PLAY BUTTON DOWN TO INITIATE
- III UNIT WILL SCAN LOCAL SIGNALS and COMMIT SCANNED STATIONS as "PH1, PH2..."
- IV START FROM STEP 1 WHEN IN A NEW AREA



- 1 LCD Display
- 2 Mode (Phono/Radio/USB/SD(SCH)/Aux)
- 3 Record button
- 4 Delete button
- 5 Stop button
- 6 Play/Pause button
- 7 Previous button
- 8 Next button
- 9 USB port
- 10 SD/MMC port
- 11 Auxiliary input