



FM ALARM CLOCK RADIO with BLUETOOTH SPEAKERS BT83CR | BT84CB

## //BACK PANEL

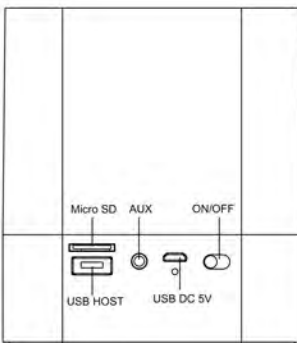

- TURN UNIT ON WITH ON/OFF SWITCH
- PLUG IN MICROUSB CABLE TO CHARGE AND POWER UNIT
- CHARGE FOR AT LEAST 5 hrs BEFORE TAKING IT ON THE GO.

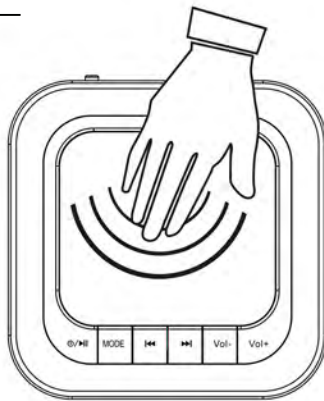

//Touch SPEAKER MESH (not the logo plate) once to adjust LED light level (no light / low brightness / mid brightness / high brightness)

//Constant on as Alarm Clock Radio - Unit will stay on as long as the unit is charging with a MICRO USB cable plugged in. Unit display will automatically turn off (with 3 minutes of inactivity) if unplugged.

## //ONE TOUCH NIGHT LIGHT



## QUICK START GUIDE

### -BUTTON LEGEND-

- 1: Play/Pause/Standby
- 2: Mode
- 3: Previous
- 4: Next
- 5: Volume UP
- 6: Volume DOWN



- DISPLAY TIME - CLICK **1**
- DISPLAY TIME OFF - HOLD **1**
- DISPLAY 24 HR ON/OFF - CLICK **3** or **4**

**-MODE SEQUENCE-** CLICK **2** to change MODE (The DEFAULT MODE is time mode. Time mode will display after 1 minute of inactivity in any other mode.)  
**Time-> Date-> Alarm-> FM Radio ->Bluetooth-> Music Player(MP3)-> Line/AUX in-> Sleep-> Back to Time**

**-SET TIME & DATE-** In **TIME** Mode, hold **2** until year starts flashing. Adjust the year with **3** or **4**. Click **2** to set. Do the same for month, day, hour and minute.

**-SET ALARM-** In **ALARM** Mode, hold **2** until hour starts flashing. Adjust the hour with **3** or **4**. Click **2** to set. Do the same for minute, alarm ON/OFF and "Alarm Type." (Alarm Type is "rA"(Radio) or "bb"(digital birds chirping).

**-USING THE RADIO-** In **RADIO** Mode, hold **2** until auto seek initiates. Local stations will be automatically stored as presets "P1, P2, P3..." and so forth. Fine tune FM frequency with **3** or **4**. Click **1** to scroll through preset stations.

**-CONNECTING BLUETOOTH-** In **BLUETOOTH** ("bBLUE") Mode, unit will be in automatic pairing state. On your mobile device, find corresponding model number ("BT83CR," "BT84CB." etc.) You will hear a confirmation ("bluetooth connected") when successfully paired. (In the case where the device asks for a passcode, enter "0000")

**-USB and SD PLAYBACK-** In **USB/SD PLAYBACK** ("SCH") Mode, Insert USB drive or MICRO SD card into corresponding slot on the back of the unit. Click **1** to play and pause. Click **3** or **4** for previous or next track. If no drive or card is inserted, "NO d" will be displayed.

**-SLEEP MODE-** In **SLEEP** Mode, Click **1** to select desired sleep time (OFF / 15 / 30 / 60 / 120 minutes), this setting works for all audio modes (FM Radio, SCH/USB/MICRO SD and AUX).