



FM ALARM CLOCK RADIO with BLUETOOTH SPEAKERS BT86 | BT87CR | BT88CB

//BACK PANEL BT87CR | BT88CB

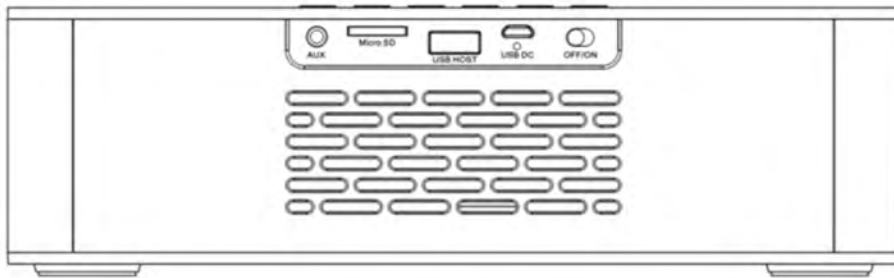

//BACK PANEL BT86

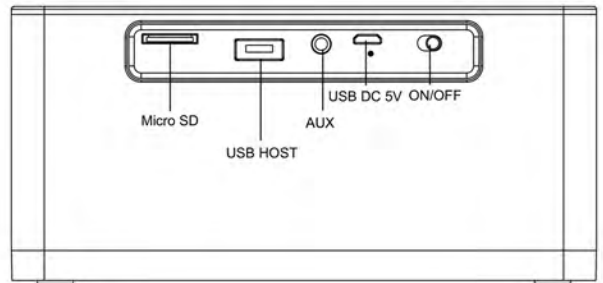

 
- TURN UNIT ON WITH ON/OFF SWITCH
- PLUG IN MICROUSB CABLE TO CHARGE AND POWER UNIT
- CHARGE FOR AT LEAST 5 hrs BEFORE TAKING IT ON THE GO.

//Constant on as Alarm Clock Radio - Unit will stay on as long as the unit is charging with a MICRO USB cable plugged in. Unit display will automatically turn off (with 3 minutes of inactivity) if unplugged.

QUICK START GUIDE

-BUTTON LEGEND-

- 1: Play/Pause/Standby
- 2: Mode
- 3: Previous
- 4: Next
- 5: Volume UP
- 6: Volume DOWN



- DISPLAY TIME - CLICK 1
- DISPLAY TIME OFF - HOLD 1
- DISPLAY 24 HR ON/OFF - CLICK 3 or 4

-MODE SEQUENCE- CLICK 2 to change MODE (The DEFAULT MODE is time mode. Time mode will display after 1 minute of inactivity in any other mode.)
Time-> Date-> Alarm-> FM Radio ->Bluetooth-> Music Player(MP3)-> Line/AUX in-> Sleep-> Back to Time

-SET TIME & DATE- In **TIME** Mode, hold 2 until year starts flashing. Adjust the year with 3 or 4. Click 2 to set. Do the same for month, day, hour and minute.

-SET ALARM- In **ALARM** Mode, hold 2 until hour starts flashing. Adjust the hour with 3 or 4. Click 2 to set. Do the same for minute, alarm ON/OFF and "Alarm Type." (Alarm Type is "rA"(Radio) or "bb"(digital birds chirping).

-USING THE RADIO- In **RADIO** Mode, hold 2 until auto seek initiates. Local stations will be automatically stored as presets "P1, P2, P3..." and so forth. Fine tune FM frequency with 3 or 4. Click 1 to scroll through preset stations.

-CONNECTING BLUETOOTH- In **BLUETOOTH** ("bBLUE") Mode, unit will be in automatic pairing state. On your mobile device, find corresponding model number ("BT83CR," "BT84CB." etc.) You will hear a confirmation ("bluetooth connected") when successfully paired. (In the case where the device asks for a passcode, enter "0000")

-USB and SD PLAYBACK- In **USB/SD PLAYBACK** ("SCH") Mode, Insert USB drive or MICRO SD card into corresponding slot on the back of the unit. Click 1 to play and pause. Click 3 or 4 for previous or next track. If no drive or card is inserted, "NO d" will be displayed.

-SLEEP MODE- In **SLEEP** Mode, Click 1 to select desired sleep time (OFF / 15 / 30 / 60 / 120 minutes), this setting works for all audio modes (FM Radio, SCH/USB/MICRO SD and AUX).