


BOYTONE® BT87CR | BT88CB
FM ALARM CLOCK RADIO with BT Connect Speakers



boytone®
FM ALARM CLOCK RADIO
WITH BT SPEAKERS

Button Layout

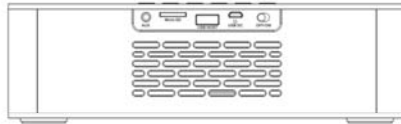

1. **⏻/⏮** --- **Press and hold** **⏻/⏮** to turn clock radio on or off. Press to play or pause music in SCH (USB or Micro SD card) mode. Press to answer or end a call in hands-free, mobile phone mode.
2. **MODE** --- Press "Mode" to select mode. **Press and Hold** Mode to set time in clock when in clock mode, to set the alarm time in alarm mode and seek/search in radio mode.
3. **⏮** --- Press **⏮** for previous MP3 music track or tune radio. **Press and hold** **⏮** to fast rewind through track in MP3 mode or next preset radio station in Radio Mode. Press **⏮** to switch between 12 hour/24 hour in clock or alarm mode
4. **⏭** --- Press **⏭** for next MP3 music track or tune radio. **Press and hold** **⏭** to fast forward through track in MP3 mode or next preset radio station in Radio Mode. Press **⏭** to switch between 12 hour/24 hour in clock or alarm mode

00:03 AM 12:03

5. **V-** --- Press **V-** to decrease volume
6. **V+** --- Press **V+** to increase volume
7. **Manual Power Switch** --- Located on the back of the unit, click left and right to turn off and on, respectively.

Device power supply

1. (DC 5V) power supply
2. Build-in lithium battery

Rechargeable Lithium Battery

1. Charging – Plug in a MICRO USB cable and the red LED indicator will light up indicating device is charging. Lithium Rechargeable Battery will fully charge in approximately 8-10 hours
2. To prevent damage or battery leakage to the Lithium Rechargeable Battery, please fully charge Lithium Rechargeable Battery at least once a month.

Operation of Unit:

Power Switch key --- Click the back switch to turn on our clock radio. Upon being switched on, LED display will display "HI."

Constant on as Alarm Clock Radio --- Unit will stay on as long as the unit is charging with a MICRO USB cable plugged in. Unit display will automatically turn off (with 1 minute of inactivity) if unplugged.

MODE/FUNCTION SEQUENCE:

Time-> Date-> Alarm-> FM Radio ->Bluetooth-> Music Player(MP3)-> Line/AUX in-> Sleep-> Back to Time


The default mode is Time, when you power on the device.



Time Mode

The DEFAULT MODE is time mode. Time will display upon 1 minute of inactivity in any other mode.

Press and **hold** the MODE BUTTON enter the setting time mode,
Press “◀◀” or “▶▶” to adjust the digits Year/Month/Date/Hour/Minute
Press “MODE” button again to confirm setting.

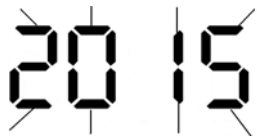

Alarm Mode

In Alarm mode, press and hold MODE BUTTON to enter the alarm setting mode.

Press “◀◀” or “▶▶” to adjust the hour and minutes for desired alarm time.



After confirming alarm time, Press “◀◀” or “▶▶” to select “ON” or “OFF” for the alarm. An alarm icon will appear in the bottom row.



Alarm Type

If Alarm is set to ON, Press “◀◀” or “▶▶” to select “rA/FM radio” or “bb/Birds chirping.”



The default alarm type are the birds chirping.

FM Radio Mode

Our unit comes with a built-in FM antenna.

Press “◀◀” key to tune station manually.

Press ▶▶ key to tune station manually.

Seek and Preset Stations

Press and hold “MODE” BUTTON key to search/seek and automatically store local FM stations.

Press “▶◁” key to display the FM Station frequency and the corresponding programmed station number (i.e.

P01, P02, etc)



87.5 P01
MHz

For optimal signal reception, adjust the position of the unit or Insert the 3.5mm Line in cable in AUX socket.

BT Connect Mode

Press MODE to select the Bluetooth mode.

In Bluetooth mode, LED Display will show "BLUE." The unit is ready to be searched and paired.



BLUE

Upon transmitting your Bluetooth device (e.g. mobile, tablet, etc.), search for the corresponding BT model for this manual. You will hear a confirmation tone when successfully paired. (In the case where the device asks for a passcode, enter "0000")

When Playing Music on the Speaker

Press ◀◀ key to select previous track .Press ▶▶ key to select next track.

Press ▶||◀ key to play / pause Music.

Press V+ key to increase the volume. Press V- key to decrease the volume.

Your mobile phone or other device may also be used to control music playback.

-Handset and Hands-free MODE

Press ⏻/▶|| to answer or end your call.

When in Bluetooth mode, our Alarm Clock Radio Bluetooth device and Mobile phone will be paired automatically

MP3 Mode

Insert USB drive or MICRO SD card into corresponding slot on the back of the unit. If no drive or card is inserted, "NO d" will be displayed.



SCH NO d

Press ◀◀ key to select previous track .Press ▶▶ key to select next track.

Press ▶||◀ key to play / pause Music



00:01 SD 00:01 USB

AUX(LINE-IN) Mode

Press MODE key to select Audio Input (Line / AUX) Mode.

 
LINE-IN 3.5mm cable is inserted in the AUX socket to connect external player device or to computer audio out.



LINE

Press **V+** key to increase the volume.
 Press **V-** key to decrease the volume

Sleep Mode (Automatic Sleep setting)

In Sleep Mode, Press  to adjust the sleep time (OFF / 15 / 30 / 60 / 120 minutes), this setting works for all audio modes (FM Radio, SCH/USB/MICRO SD and AUX).

5OFF 5 15

FAQ:

No Power	Battery may not have sufficient charge. Charge at least 2 hours, unplug and switch on.
No Sound	Check the level of volume to make sure it is not on zero volume.
Device hanging up	Switch OFF the power then Switch ON the power again OR After charging, unplug and switch ON the power once again

Specification

DISPLAY	LED	
Built-in Rechargeable Lithium Battery	Play time :Max 6~ 8 Hours *According to the level of Volume	
LINE-IN Audio in (AUX)	Max. input	(L) 300mV+ (R) 300mV
	Output power	5W
MP3/WMA/APE/F LAC/WAV	MP3 Bit Rate	8K bps – 320K bps
	Signal noise Ratio(SNR)	85dB
	Signal Distortion	<0.55%
Music Format	MP3,WMA,WAC,FLAC	
Operation Temperature	-5 to 40 Celsius Degree	

* Product appearance, function and specification subject to change without prior notice.