



BT-17DJ-C

17DJ-C SERIES
17DJB-C | 17DJM-C | 17DJS-C

//FEATURES

- 33/45/78 RPM Multi-Speed Turntable Player
- Automatic Pause and Stop Feature
- Stereo Cassette Tape Player Function
- Stereo FM Radio
- Encode to MP3
- SD/USB Playback
- Aux In
- 3.5mm Headphone Jack
- RCA Audio Output
- 2 Built-in Stereo Speakers

PC, TV, DVD

AUX

USB, SD/MMC

MP3

//33/45/78RPM

PLAYING A RECORD

1. Select "PHONO" mode
2. Set appropriate speed (33, 45 or 78) depending on record
3. Set the auto stop control to ON if you want the turntable to stop turning when it has reached the end of the record.
4. Use lift lever to move stylus (it is recommended over doing it manually)

NOTE: We don't need to mention that a record is required and needs to be placed in the unit, right?


QUICK START GUIDE

A ENCODING


1. SELECT DESIRED MODE FOR ENCODING USING (5).
2. INSERT YOUR MEMORY DEVICE (e.g. SD Card or USB drive - not both).
3. PRESS THE RECORD BUTTON (3) AND WAIT UNTIL SD OR USB ICON FLASHES.
4. START YOUR DESIRED MEDIA (PHONO, AUXILIARY INPUT OR CASSETTE).
5. PRESS STOP BUTTON WHEN DONE. ENJOY!

B PLAYBACK

- I** RADIO:
USE TUNING KNOB (16) TO SELECT STATION.
- II** CASSETTE:
INSERT TO PLAY. PRESS HALFWAY TO FAST FORWARD. PRESS FULLY TO EJECT.
- III** AUX-IN: USE 3.5mm CABLE TO CONNECT
- IV** SD CARD OR USB DRIVE:
INSERT MEDIA. USE (13), (14), (17), (18)

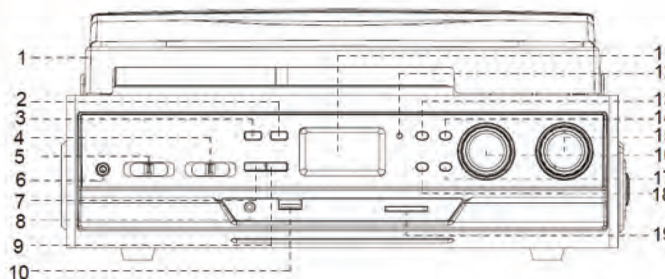

- 1 Dust cover
- 2 Mode (USB/SD)
- 3 Record button
- 4 Without this function
- 5 Function selector
- 6 Auxiliary input
- 7 Delete button
- 8 3.5mm headphone socket
- 9 Program button
- 10 USB port
- 11 LC display
- 12 Power LED indicator
- 13 Play/Pause button
- 14 Stop button
- 15 Volume knob
- 16 Tuning (Radio)
- 17 Skip up button
- 18 Skip down button
- 19 SD/MMC card slot

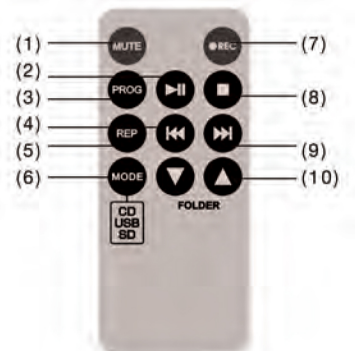

1. MUTE
2. PLAY/PAUSE
3. PROGRAM
4. PREV: skip to the previous track
5. REPEAT
6. INPUT/SOURCE (FOR USB/SD ONLY)
7. REC
8. STOP
9. NEXT: skip to the previous track
10. FOLDER SELECT (FOR USB/SD PLAYBACK ONLY)