



1. POWER
2. MUTE

3. MODES

FM/AM | PHONO | CD
TAPE | AUX-IN | USB/SD/MMC

4. PROGRAM (RADIO - see below)
5. VOLUME UP
6. VOLUME DOWN
7. PREVIOUS (CD and USB/SD)
8. PLAY/PAUSE (CD and USB/SD)
9. FORWARD (CD and USB/SD)
10. RANDOM TRACK (CD and USB/SD)
11. STOP (CD and USB/SD)
12. REPEAT one, all or folder (CD and USB/SD)
13. FOLDER SELECT (FOR USB/SD PLAYBACK ONLY)

NOTE: Your remote may vary depending on production batch. Rev. 03/1/2017

//FEATURES

- Bluetooth Receiver
- Multi-Speed Turntable
- Pitch Control
- Automatic Pause and Stop
- CD Player
- Cassette Tape Player
- Stereo FM Radio
- AM Radio
- Encode playback to MP3
- SD/USB Playback
- Aux-In
- 3.5mm Headphone Jack
- RCA Audio Output
- 2 Built-in Stereo Speakers

//MULTI-SPEED

PLAYING A RECORD

1. Select "PHONO" mode
2. Set appropriate speed (33 or 45) depending on record
3. Use lift lever to raise and lower stylus (it is recommended over doing it by hand)
4. Adjust Pitch to appropriate level

Note: The stylus will return automatically to its resting position when the record is finished playing.

Note: There is a tonearm weight which adjusts the tracking force of the needle. It is recommended to adjust the tonearm for optimal playback.

POWER ON and OFF by pressing the Volume Knob.

1 PLAYBACK

FM/AM MODE - HOLD **[[** or **]]** to auto seek stations one at a time. CLICK **[[** or **]]** to select "programmed stations." To PROGRAM stations, CLICK **PROG** button when on the desired station frequency and CLICK **[[** or **]]** to select "P01" or "P02" all the way up to "P20." CLICK **PROG** again to set desired station number.

CD/USB/SD MODE - Insert respective media (CD, USB pen drive or SD Card). CLICK **▶** to play or pause. CLICK **[[** or **]]** to select previous or next track/song.

TAPE MODE - Cassette tape will auto play when inserted correctly. CLICK cassette button on the side of the unit to fast forward. PRESS cassette button all the way to eject. Unit will not rewind cassette tapes and only plays one side at a time.

BLUETOOTH MODE - SELECT **BLUETOOTH ("BT")** Mode and unit will be in automatic pairing state. On your mobile device, search for corresponding model number or "Boytone" and pair. You will hear a digital chime when successfully paired. (In the case where the device asks for a passcode, enter "0000")

2 ENCODING PLAYBACK TO MP3

ENCODING in CD MODE - CLICK **REC** button then CLICK **[[** or **]]** to select "ALL" to record the entire CD or "ONE" to record the current track. CLICK **REC** button to confirm selection and let the BT11B take it from there. CLICK **■** any time to stop recording. Note: Encoded MP3 files will be in the "RECORD/CDIN" folder on your USB or SD card.

ENCODING in FM/AM, PHONO, TAPE, AUX and BT MODE - CLICK **REC** button to start recording when in respective mode and let the BT11B take it from there. CLICK **■** any time to stop recording. Note: Encoded MP3 files will be in the "RECORD/EXREC" folder on your USB or SD card.

Desmair