

## BT-25 | 25 SERIES BT25CB | BT25MB | BT25WB



### //FEATURES

- Bluetooth Receiver
- 33/45/78 RPM Multi-Speed Turntable Player
- CD Player
- Automatic Pause and Stop Feature
- Stereo Cassette Tape Player Function
- Stereo FM Radio
- Encode to MP3
- SD/USB Playback
- Aux In
- 3.5mm Headphone Jack
- RCA Audio Output
- 2 Built-in Stereo Speakers

### BT//33/45/78RPM

#### CONNECTING BLUETOOTH

1. Select "SH" mode
2. Flick switch by Stylus arm
3. On your transmitting device, search for bluetooth devices.
4. Pair/Connect "Boytone/BT."

#### PLAYING A RECORD

1. Select "PHONO" mode
2. Set appropriate speed (33, 45 or 78) depending on record
3. Set the auto stop control to ON if you want the turntable to stop turning when it has reached the end of the record.
4. Use lift lever to move stylus (it is recommended over doing it manually)

PC, TV, DVD AUX

USB, SD/MMC MP3


## QUICK START GUIDE

### A CD PLAYBACK


- 1 SELECT CD MODE USING THE FUNCTION SELECTOR (7).
- 2 OPEN CD TRAY USING CD OPEN/CLOSE BUTTON (21).
- 3 PLACE CD IN TRAY. UNIT MAY TAKE A FEW SECONDS TO READ DISC.
- 4 PRESS PLAY ONCE TOTAL PLAY TIME OF CD IS DISPLAYED.
- 5 PRESS STOP, NEXT OR PREVIOUS TRACK. GO NUTS. ENJOY!

### B RADIO/ CASSETTE/ AUX-IN/ SD/USB PLAYBACK

- I RADIO: USE TUNING KNOB (16) TO SELECT STATION.
- II CASSETTE: INSERT TO PLAY. PRESS HALFWAY TO FAST FORWARD. PRESS FULLY TO EJECT.
- III AUX-IN: USE 3.5mm CABLE TO CONNECT
- IV SD CARD OR USB DRIVE: INSERT MEDIA. USE (13), (14), (17), (18)

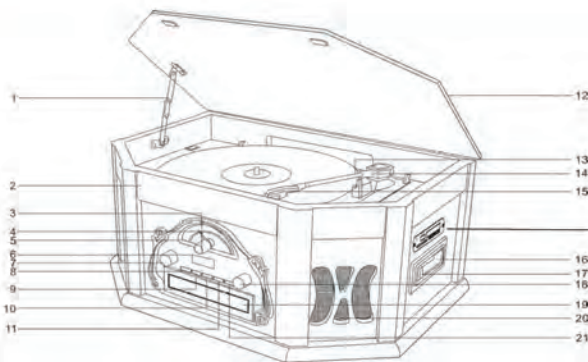

- 1 Lid Arm
- 2 Main Body
- 3 Tuning Knob
- 4 Tuning Pointer
- 5 Frequency Dial
- 6 LED Indicator
- 7 Function Selector
- 8 Play/Pause Button
- 9 Stop button
- 10 Previous/Rewind Button
- 11 Next/Forward Button
- 12 Dust Cover
- 13 45RPM Adaptor
- 14 Tone Arm
- 15 Accoustical Pickup
- 16 Cassette Player
- 17 Cassette Play/Skip button
- 18 Power Button
- 19 CD Disc Tray
- 20 Speaker
- 21 CD Tray Open/Close Button
- 22 USB/SD Player

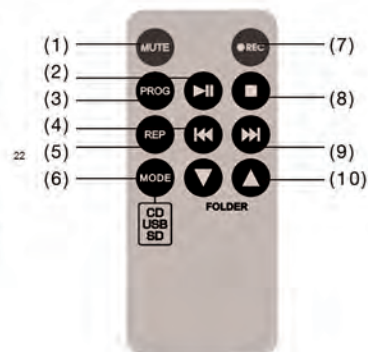

1. MUTE
2. PLAY/PAUSE
3. PROGRAM
4. PREV: skip to the previous track
5. REPEAT
6. INPUT/SOURCE (FOR USB/SD ONLY)
7. REC
8. STOP
9. NEXT: skip to the previous track
10. FOLDER SELECT (FOR USB/SD PLAYBACK ONLY)

NOTE: Your remote may vary depending on production batch. Rev. 11/1/2016