

## BT-27 | 27 SERIES BT27GC | BT27RC



### //FEATURES

- Bluetooth Receiver
- 33/45/78 RPM Multi-Speed Turntable Player
- Automatic Pause and Stop Feature
- Stereo Cassette Tape Player Function
- Stereo FM Radio
- Encode to MP3
- SD/USB Playback
- Aux In
- 3.5mm Headphone Jack
- RCA Audio Output
- 2 Built-in Stereo Speakers

### BT//33/45/78RPM

#### CONNECTING BLUETOOTH

1. Select "CASSETTE" mode
2. Press the "Mode" button
3. On your transmitting device, search for bluetooth devices.
4. Pair/Connect "Boytone/BT."

#### PLAYING A RECORD

1. Select "PHONO" mode
2. Set appropriate speed (33, 45 or 78) depending on record
3. Set the auto stop control to ON if you want the turntable to stop turning when it has reached the end of the record.
4. Use lift lever to move stylus (it is recommended over doing it manually)

PC, TV, DVD AUX

USB, SD/MMC MP3


## QUICK START GUIDE

### A ENCODING


1. SELECT DESIRED MODE FOR ENCODING USING (5).
2. INSERT YOUR MEMORY DEVICE (e.g. SD Card or USB drive - not both).
3. PRESS THE RECORD BUTTON (3) AND WAIT UNTIL SD OR USB ICON FLASHES.
4. START YOUR DESIRED MEDIA (PHONO, AUXILIARY INPUT OR CASSETTE).
5. PRESS STOP BUTTON WHEN DONE. ENJOY!

### B PLAYBACK

- I RADIO: USE TUNING KNOB (16) TO SELECT STATION.
- II CASSETTE: INSERT TO PLAY. PRESS HALFWAY TO FAST FORWARD. PRESS FULLY TO EJECT.
- III AUX-IN: USE 3.5mm CABLE TO CONNECT
- IV SD CARD OR USB DRIVE: INSERT MEDIA. USE (13), (14), (17), (18)

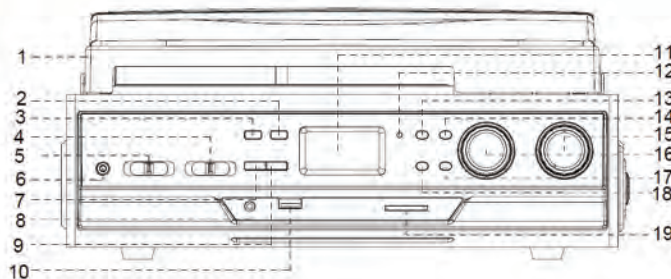

- 1 Dust cover
- 2 Mode (USB/SD)
- 3 Record button
- 4 Without this function
- 5 Function selector
- 6 Auxiliary input
- 7 Delete button
- 8 3.5mm headphone socket
- 9 Program button
- 10 USB port
- 11 LC display
- 12 Power LED indicator
- 13 Play/Pause button
- 14 Stop button
- 15 Volume knob
- 16 Tuning (Radio)
- 17 Skip up button
- 18 Skip down button
- 19 SD/MMC card slot

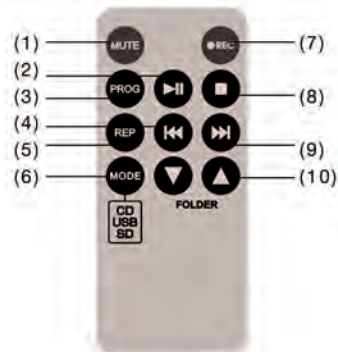

1. MUTE
2. PLAY/PAUSE
3. PROGRAM
4. PREV: skip to the previous track
5. REPEAT
6. INPUT/SOURCE (FOR USB/SD ONLY)
7. REC
8. STOP
9. NEXT: skip to the previous track
10. FOLDER SELECT (FOR USB/SD PLAYBACK ONLY)