



2.1 Indoor/Outdoor HI-FI Speaker
with 5 Inch Subwoofer with
BT CONNECTION



Model number:

BT-50BK

BT-50GR

BT-50RD

Dear user:

Thank you for choosing our company's professional active audio products, the speaker is specifically design and produce for exercise, fitness, dance, opera, music, shopping guide, which are widely used in schools, shopping malls, indoor and outdoor activities. The sound is clear and strong base in good quality. It has many advantages such as long working time, stable performance, and convenient operation and so on, which is a good partner of your work and life.

THE PRODUCT FEATURES

1. Portable Shoulder USB/TF Card, Bluetooth Speaker
2. Play MP3 format music from TF card, U disk Connect 3.5mm stereo audio cable to speaker socket "LINE IN", can enjoy the music from mobile phone, MP3, MP4, PC, IPOD and other audio devices
3. With Karaoke Function support wired and wireless microphone.
4. With high-pitched voice

DIRECTORY

1. The product features2
2. Technical parameters.....2
3. Packing list.....2
4. Connect using Bluetooth technology.....2
5. The function instructions.....3
6. The remote instructions4

TECHNICAL

1. Power Maximum20 W
2. Frequency Response.....100Hz-20KHz
3. S/N Radio.....≥75dB
4. Output Impedance4Ω
5. Input voltage..... DC 5V


PACKING LIST

1. Host1PC
2. User Manual.....1PC
3. 3.5mm Audio cable1PC
4. Remote Control.....1PC
5. Wireless microphone.....2PC

CONNECT USING BLUETOOTH TECHNOLOGY

1. Turn ON the unit
2. Activate the Bluetooth function on your Bluetooth Device (Mobile phone or Tablet PC, Notebook etc. ;).
3. Once you have activated Bluetooth on your device, select the"WST-K1"from the list of available Bluetooth devices.
4. If required, enter the password"0000"to confirm pairing.

Function operational specification:

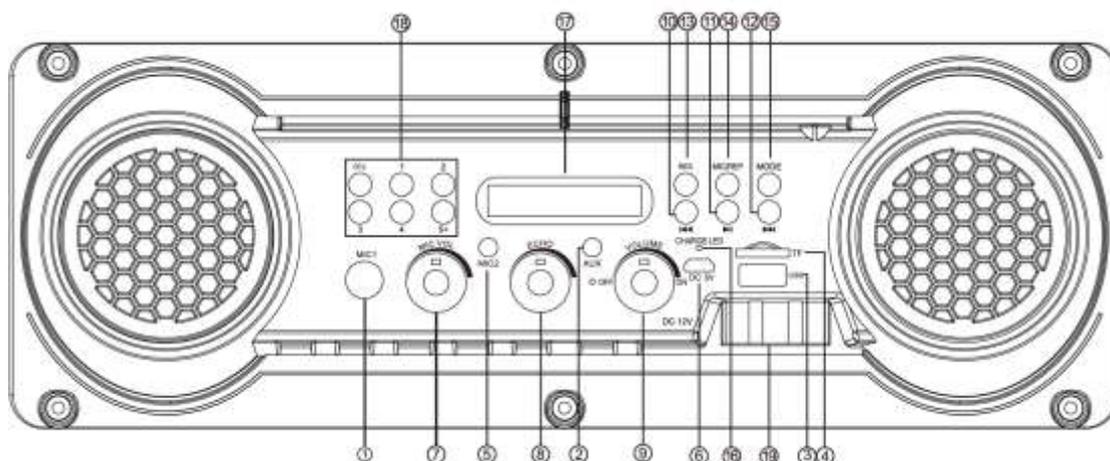

1. Microphone input port.
2. Line in input port.
3. USB interface: insert USB.
4. TF card interface: insert TF card.
5. 3.5mm Microphone input port.
6. DC input: take connection DC 5V.
7. Microphone Volume Knob.
8. Echo volume knob.
9. Power switch and Volume knob.
- 10/12. Pre/Next: When you play the USB and TF card, short press to choose Pre/Next music, long press to manual operation forwarder sequence adjustment, when AUX input without function.
11. Play/Pause: when play USB and TF card, short press to play/pause. When at AUX state is mute.
13. Record button: Long press to enter record state, then short press again to play record, long press to delete record.
14. Karaoke priority/Repeat mode button: Short press this button, the digital tube MIC on light, into the microphone priority mode, then press this button again, the MIC die out, at this point, cancel the karaoke priority mode.
- Under USB/TF playing mode, Long press this button to set repeat playback (One, Random, Folder, and All, 4 modes)
15. Mode: Short press to switch Bluetooth, USB/TF, and AUX input state.
16. Charge LED: when charging, the light is red
17. Digital display window
18. 0-4 number keys: Quick select songs for U disk, TF card; **It's no use for AUX and Bluetooth;**
19. External DC 12V power input

The Remote Instructions

1. To turn the unit on for music playback or standby mode
2. When playback from the USB/SD source, pressing this button to set repeat playback setting (Single, Random, Folder or All track repeat).
3. Change the playback source mode of BLUE CONNECT/LINE/USB/TF
4. Previous song for USB/SD playback.
5. Next song for USB/SD playback.
6. Under USB/TF/BT source playback mode, press this button to select different EQ hearing.
7. During USB/SD playback mode, press this button to pause the playback. Press again to resume playback.
8. Volume decrease.
9. Volume increase.
10. Pressing this button to mute the unit's speaker output at any time. Press again to resume speaker output.
11. The number keys 0-9: During USB/SD playback mode, press the number combination to designate that song number to start playback. (Note: When done pressing the number combination, just wait 2 seconds and the system will automatically confirm your input).
12. When the unit is operating USB/SD playback mode, press this button to permanently stop playing the source file. You need to press to restart playback.

