

USER'S MANUAL
MODEL: T16



Dear user:

Thank you for choosing our company's professional active audio products, the speaker is specifically design and produce for exercise, fitness, dance, opera, music, shopping guide, which are widely used in schools, shopping malls, indoor and outdoor activities. The sound is clear and in good quality. It has many advantages such as long working time, stable performance, convenient operation and so on, which is a good partner of your work and life.

THE PRODUCT FEATURES

1. Portable Shoulder USB/TF Card, Bluetooth Speaker
2. Play MP3 format music from TF card, U disk Connect 3.5mm stereo audio cable to speaker socket "AUX IN", can enjoy the music from mobile phone, MP3, MP4, PC, IPOD and other audio devices
3. With FM Function
4. With Karaoke Function
5. With high-pitched voice

DIRECTORY

1.The product features	1
2.Technical parameters.....	2
3.Packing list.....	2
4.Connect using bluetooth technology.....	3
5.The function instructions.....	3
6.The remote instructions	4

TECHNICAL

1. Power output 7W
2. Frequency Response.....100Hz-20KHz
3. S/N Radio..... ≥ 75 dB
4. Battery capacity.....3.7V 1800mAh
5. Input voltage..... DC 5V

 
PACKING LIST

1. Host1PC
2. User Manual.....1PC
3. 3.5mm Audio cable1PC
4. Remote control1PC
5. Belt1PC

CONNECT USING BLUETOOTH TECHNOLOGY





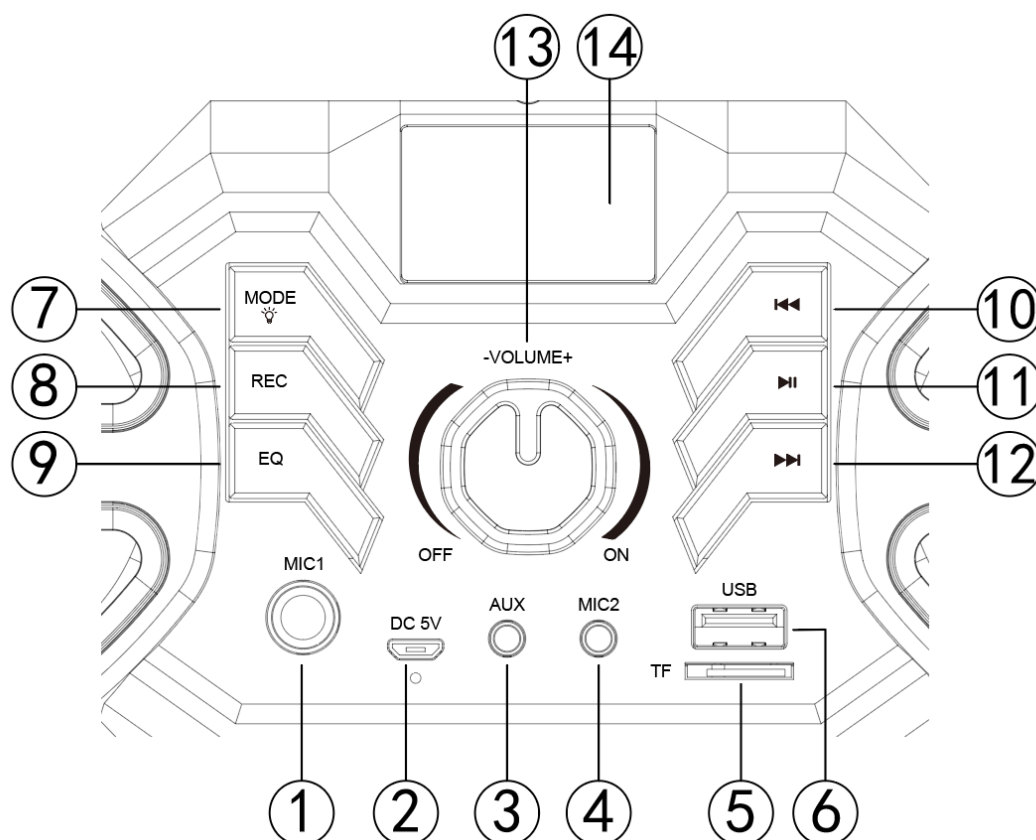


- 1.Turn ON the unit
- 2.Activate the Bluetooth function on your Bluetooth Device (Mobile phone or Tablet).
- 3.Once you have activated Bluetooth on your device,select the"T16"from the list of available Bluetooth devices.
- 4.If required,enter the password"0000"to confirm pairing.

Function operational specification :



1. MIC1: 6.5mm wired microphone socket
2. DC 5V: Charging port
3. AUX :Socket for 3.5mm audio cable
4. MIC2:Socket for 3.5mm Micphone
5. TF Card:Socket for TF card
6. USB:Socket for USB driver
7. Mode:Press this button to switch between Bluetooth/USB/TF Card/AUX and FM modes.Long press for speaker LED lights switch on/off
8. REC:After you insert a USB or TF card,short press this button, it will play the recording files of the flash. Long press this button, it starts recording(Indication voice recording),you can use a inserted micphone to record the sound out from micphone,Short press it again,it will play the recording file you just did.
- 9.EQ:EQ mode from Off/Normal/Pop/Jazz/Rock/Class
- 10.Previous song under USB/TF/Bluetooth mode. In FM radio mode,short press for previous station stored.
- 11.Play/Pause:Short press for play and pause under USB/TF/Bluetooth mode.Under FM radio mode,Long press to start auto-search stations,Long press again to stop auto-search.
- 12.Next song under USB/TF/Bluetooth mode. In FM radio mode,short press for next station stored.
13. Volume knob: Volume Knob for master volume and mic volume.
- 14.Display: Digital LED display.

The Remote Instructions

1. POWER: To turn the unit on for music playback or standby mode
2.  : When playback from the USB/SD source, pressing this button to set repeat playback setting (Single, random, All track repeat).
3. MODE: Change the playback source mode of Bluetooth/AUX/FM/USB/TF
4.  : Previous song for USB/Micro SD playback mode. Previous channel for radio mode.
5.  : Next song for USB/Micro SD playback mode. Next channel for Radio Mode
6. EQ: Under USB/TF source playback mode, press to select different EQ hearing
7.  : During USB/SD/Bluetooth playback mode, press this button to pause the playback. Short again to resume playback. During FM radio mode, Long press to start auto-scan stations. Then Long press it again to stop the auto-scan during the auto-scan step.
8.  : Volume decrease.
9.  Volume increase.
10.  : Pressing this button to mute the unit's speaker output at anytime. Press again to resume speaker output.
11. The number keys 0-9: During USB/SD playback mode, press the number combination to designate that song number to start playback. During Radio Channel or Radio Frequency mode, press the number combination to select the Channel number to play. (Note: When done pressing the number combination, just wait 2 seconds and the system will automatically confirm your input).
12. STOP: When the unit is operating USB/SD playback mode, press this button to permanently stop playing the source file. You need to press to restart playback.

